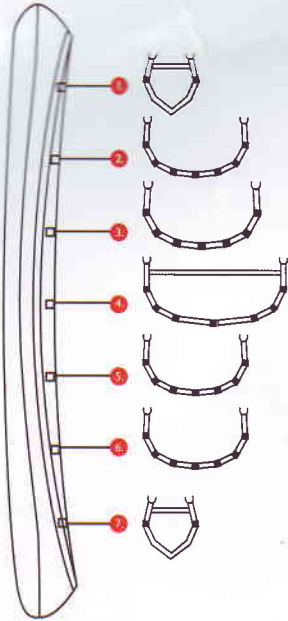
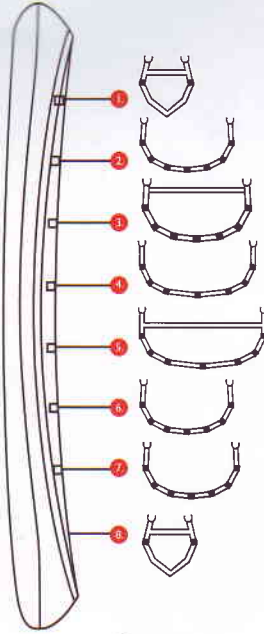
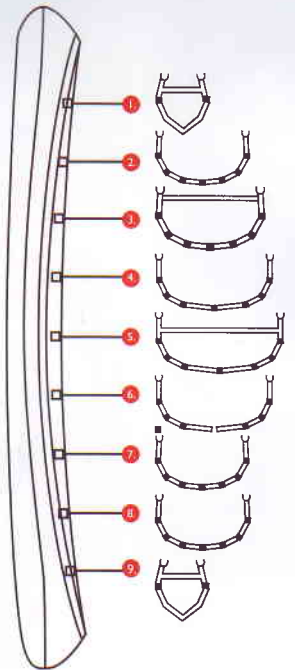
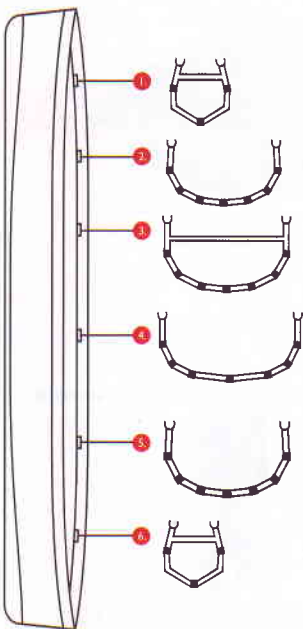
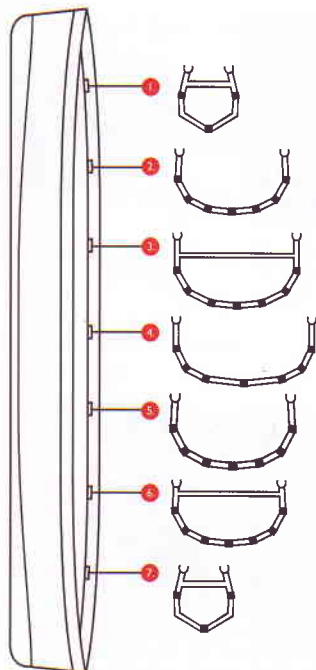
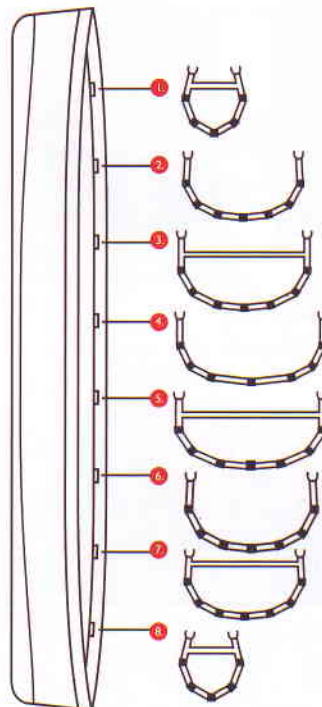
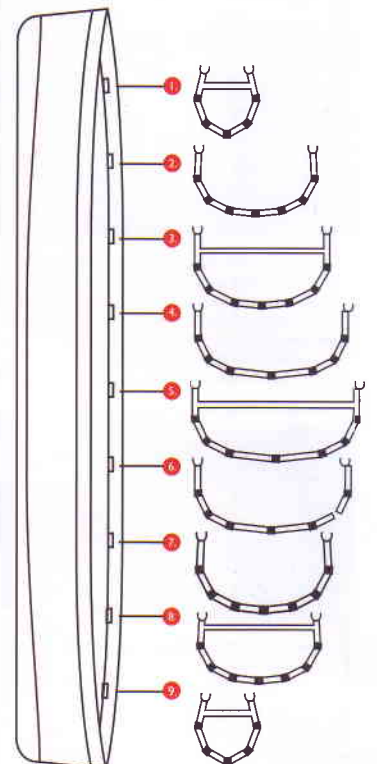
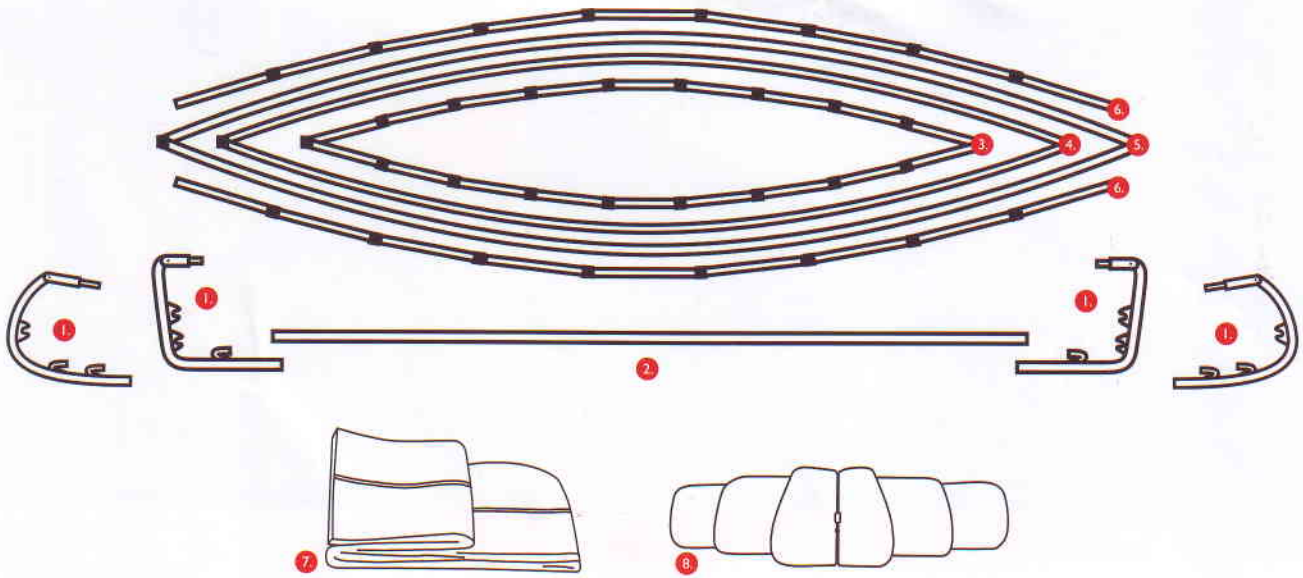

15' Standard

16' Standard

16,5' Standard

18' Standard

	15' Standard	16' Standard	16,5' Standard	18' Standard
1	1607	1702	1607	1607
2	1608	1703	1608	1608
3	1609	1704	1609	1609
4	1613	1705	1610	1610
5	1612	1720	1613	1812
6	1608	1703	1612	1610
7	1607	1702	1608	1612
8			1607	1608
9				1607

	13,7' Standard	15,5' Standard	17' Standard	18,5' Standard
1	185070	185070	185070	185070
2	185081	185081	185081	185081
3	185306	185093	185093	185093
4	185307	185100	185100	185100
5	185081	185091	185101	185110
6	185070	185083	185091	185100
7		185070	185083	185091
8			185070	185083
9				185070


13,7' Standard

15,5' Standard

17' Standard

18,5' Standard

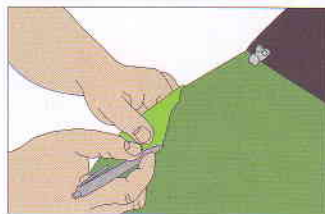


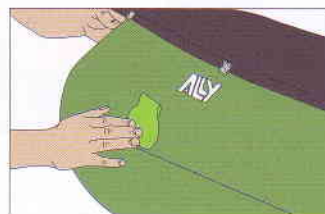
		15' Standard	16' Standard	16,5' Standard	18' Standard	13,7' Standard	15,5' Standard	17' Standard	18,5' Standard									
1	Stem (bow & stern)	1602	-	1706	-	1602	-	185500	-	185500	-	185700	-	185800	-			
2	Keel rod without plug	1503	2820mm	1701	3560mm	1603	3655mm	1803	3760mm	185301	3186mm	185501	3786mm	185701	4216mm	185801	4653mm	
3	Inner chine rod	1506	3745mm	1709	4330mm	1606	4184mm	1806	4685mm	185302	3530mm	185502	4130mm	185702	4560mm	185802	4984mm	
4	Outer chine rod	1505	4359mm	1718	4960mm	1605	4798mm	1805	5299mm	185303	4041mm	185503	4641mm	185703	5074mm	185803	5504mm	
5	Waterline chine rod	1504	4631mm	1718	4960mm	1604	5078mm	1804	5571mm	185304	4112mm	185504	4712mm	185704	5142mm	185804	5572mm	
6	Gunwales	1501	3927mm	1708	4410mm	1601	4376mm	1801	4867mm	185305	3736mm	185505	4336mm	185705	4766mm	185805	5196mm	
7	Reinforced skin	Green	1518	-	1719	-	1620	-	1820	-	185308	-	185520	-	185720	-	185820	-
		Red	-	-	-	-	-	-	-	-	185309	-	185524	-	185724	-	185824	-
8	Foam mat	1517	-	1707	-	1619	-	1819	-	18510	-	185510	-	185710	-	185810	-	

INSTALLATION OF SPRAYCOVER


The spraycover kit consists of the following parts:
 Spraycover
 Skirts
 Lid
 Attach-loops
 Bungee cord
 Resin



1. Pull the spraycover over your Ally canoe. Start at the bow and with a pen mark off the area where you want to bond on the first attach-loop, approximately 15 cm (6") below the rim.




2. Mark off the bonding area for the next attach loop, approximately 19 cm (7.5") below the rim and midway between hooks 1 and 2 on the spraycover.

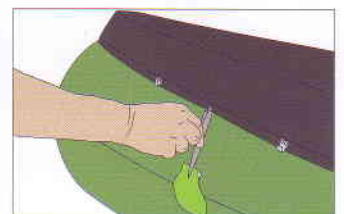

3. The remainder of the attach-loops should all be positioned midway between successive hooks. However, make sure that the attach-loops, where you will later thread the bungee cord through, all are located just above the waterline. Work your way around and finish like you started on the other side.



4. To enhance the bond, wash both the marked canoe skin bond area and the attach-loop bond area with acetone. A simple cotton cloth may be used.

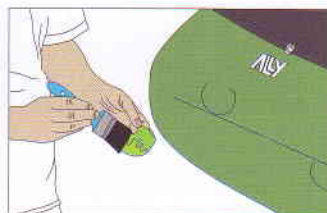

5. Ally resin should be applied with a brush to both bonding areas. Concentrate on one attachloop and its mating skin bond area at a time. Bond on each attach-loop when the applied resin starts to take on a lighter color shade.



6. Thread the bungee cord through the attach loops and secure the two ends by tying them together. You can now hook the spraycover on to the bungee cord all the way around.



7. The cap and skirt is installed through the spraycover channel.